



STULZ the natural choice

STULZ UltraSonic® Humidifying Systems



STULZ UltraSonic®

The humidifying system with maximum energy efficiency

The advantages at a glance

- **Maximum energy savings**
STULZ UltraSonic® uses up to 93 % less electricity than electrode/resistance steam humidifiers with the same output.
- **Excellent control characteristics**
Full humidifier capacity is available without delay as soon as the unit is switched on. Likewise, humidification stops as soon as the unit is switched off.
- **Energy-saving cooling effect**
STULZ UltraSonic® simultaneously cools the room. This considerably reduces the running time of the compressors when air conditioners are used at the same time.
- **Flexible actuation**
The STULZ UltraSonic® system can be actuated by means of moisture sensors, external request or ON/OFF contact.
- **Very fine mist**
The water particles have an average size of just 0.001 mm. As in isothermal steam humidifiers, the mist is absorbed immediately.
- **Long service life**
The principal components of STULZ UltraSonic® humidifier systems are of stainless steel or high-grade plastic. The oscillators have a minimum running time of 10,000 operating hours at nominal capacity.
- **Rapid amortisation / future-proof investment**
STULZ UltraSonic® humidifier systems pay for themselves within a very short time. Because of rising energy prices, the STULZ UltraSonic® system is a future-proof investment!
- **Hygienic humidification**
Thanks to a continual supply of fresh water (no recirculating water!) and a regulated purification or flushing cycle, humidification is always perfectly hygienic.





Air quality made-to-measure

In computer rooms, laboratories, clean rooms, hospitals and offices - in fact, wherever humidification is a vital element of optimum air conditioning.

For printing presses, lithographers, photo labs and electronics factories, made-to-measure humidifier solutions ensure highly efficient production. Humidification also plays an important role in the leather and textile industry.

In baking firms and cheese factories, in warehouses for fruit and vegetables and in food counters, humidification preserves quality and optimises the production process.

In all cases, with our STULZ UltraSonic® humidifying systems, STULZ provides made-to-measure humidification to ensure the best possible processes and high quality standards.

This is how it works

A rapid change in pressure produces ultrasonic waves. In order to make use of these ultrasonic waves for the humidification process, the electronically produced ultrasonic frequency must be converted into mechanical energy by a piezoelectric converter. The surface of the oscillating converter vibrates at such a speed that the water can no longer follow the movement due to inertia, giving rise to a momentary vacuum and therefore compression. The air bubbles created in this way impact with one another with great force, in a process known as cavitation. In addition, the sonic power is focused just under the surface of the water producing cross waves. At the point where these waves intersect, tiny droplets of water break down to form a mist that is assimilated by the flow of air. The process of optimum "cool" humidification is complete.

STULZ UltraSonic®

ENS humidifiers for integration

Devices from the UltraSonic® ENS model series are designed for use in ventilation and air-conditioning systems. They can be installed in ventilation ducts, box-type units and air conditioners, for example. The ENS 1200-9600 series is modular in design, with graduated humidifying capacities ranging from 1.2 kg/h to 9.6 kg/h. In addition, the ENS 14 and ENS 18 models are available as ready built units in a stainless steel casing, with humidifying capacities of 14 kg/h and 18 kg/h. Tried and tested controller components ensure that the desired room humidity is precisely maintained.



ENS 3600



ENS 18

ENS 14




ENS humidifiers for integration

Model	Humidifier capacity (l/h)	No. of oscillators	Unit dimensions H x W x D (mm)	Power consumption (VA)	Weight without water (kg)
ENS 1200	1.2	2	157 x 220 x 145	65	1.5
ENS 2400	2.4	4	157 x 340 x 145	125	2.2
ENS 3600	3.6	6	157 x 460 x 145	185	2.9
ENS 4800	4.8	8	157 x 580 x 145	240	3.6
ENS 6000	6.0	10	157 x 700 x 145	310	4.3
ENS 7200	7.2	12	157 x 820 x 145	375	5.1
ENS 8400	8.4	14	157 x 940 x 145	435	5.8
ENS 9600	9.6	16	157 x 1,060 x 145	495	6.5
ENS 14	14.0	24	175 x 785 x 230	750	11.0
ENS 18	18.0	30	175 x 950 x 230	960	13.0

STULZ UltraSonic®

BNB direct room humidifiers

For direct room humidification, STULZ offers units from the STULZ UltraSonic® model series BNB 1000 to BNB 8000. All major components of these units are made from stainless steel or high-grade plastic. A fan integrated in the housing distributes the cold mist, which is generated in the water bath, around the room. These units are employed, for example, in the humidification of production rooms, computer rooms, storage facilities, printing plants, museums, restoration workshops, theatres and many other areas in which optimum humidity is essential for production, storage or the indoor climate.

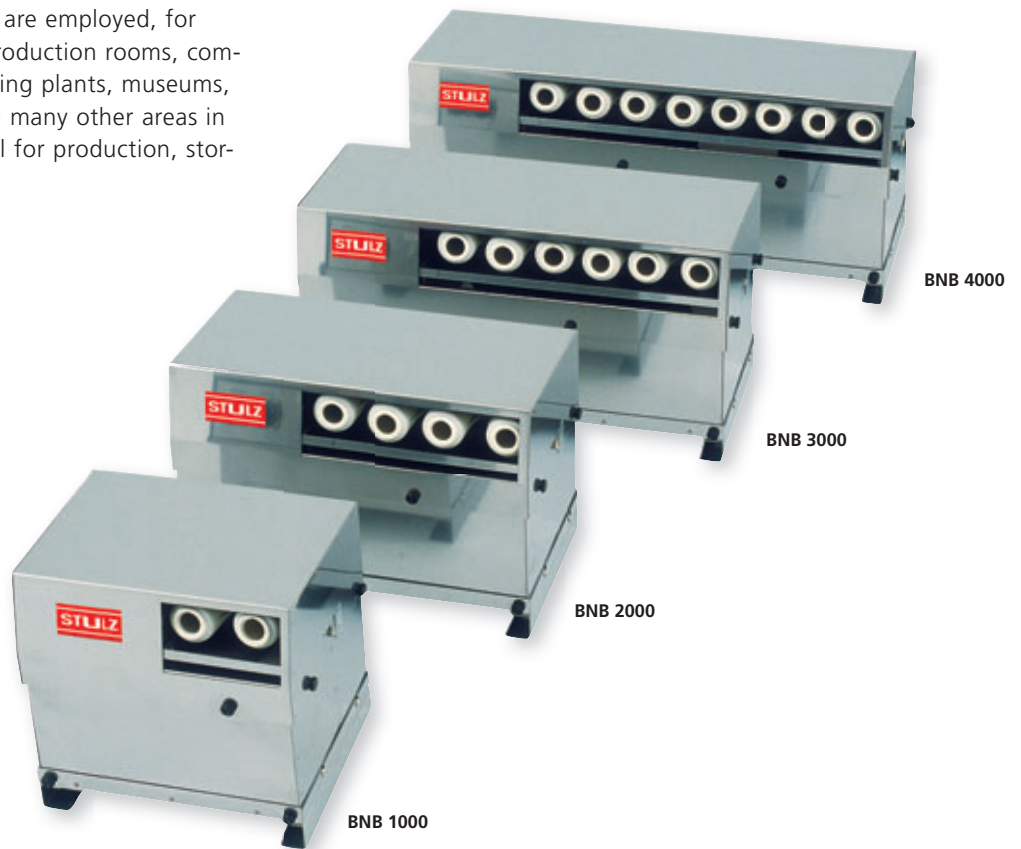

BNB direct room humidifiers						
Model	Humidifier capacity (l/h)	No. of oscillators	Unit dimensions H x W x D (mm)	Power consumption (VA)	Air throughput (m³/h)	Weight without water (kg)
BNB 1000	1.0	2	255 x 254 x 200	100	72	7.1
BNB 2000	2.0	4	255 x 364 x 200	180	108	9.3
BNB 3000	3.0	6	255 x 474 x 200	250	144	11.2
BNB 4000	4.0	8	255 x 584 x 200	340	216	14.0
BNB 5000	5.0	10	255 x 694 x 200	430	252	16.1
BNB 8000	8.0	16	255 x 1,024 x 200	670	396	23.0

STULZ UltraSonic®

Ultrasonic humidifiers with distribution system



STULZ KNB UltraSonic® humidifier

For greenhouses, fruit, vegetable and asparagus warehouses, mushroom cultivation, etc.



STULZ BBA UltraSonic® humidifier

For the prevention of electrostatic charge, e.g. in the paper and film processing industry



STULZ SCA UltraSonic® humidifier

For selective, universal humidification



STULZ FN 400 UltraSonic® humidifier

For air conditioners and fan coil units



Humidifier						
Model	Humidifier capacity (l/h)	No. of oscillators	Unit dimensions H x W x D (mm)	Power consumption (VA)	Air throughput (m³/h)	Weight without water (kg)
KNB 2000	2.0	4	245 x 280 x 220	195	48	8.0
BBA 1000 X ¹⁾	0.2-1.0	2	1,004 x 690 x 233	160	240	84.0
BBA 2000 X ¹⁾	0.2-2.0	4	1,004 x 690 x 233	220	240	84.0
BBA 1000 XL (400 V) ¹⁾	0.2-1.0	2	1,004 x 690 x 233	160	240	84.0
BBA 2000 XL (400 V) ¹⁾	0.2-2.0	4	1,004 x 690 x 233	220	240	84.0
SCA 1000	1.0	2	195 x 272 x 220	100	—	6.0
SCA 2000	2.0	4	195 x 272 x 220	160	—	7.0
SCA 1000 X ¹⁾	0.2-1.0	2	195 x 272 x 220	100	—	6.0
SCA 2000 X ¹⁾	0.2-2.0	4	195 x 272 x 220	160	—	7.0
SCA 2000 T ²⁾	2.0	4	195 x 272 x 220	160	—	8.0
FN 400 H	0.4	1	95 x 158 x 90	40	—	1.7
FN 400 HD ³⁾	0.4	1	95 x 158 x 90	40	—	1.7

¹⁾ with variable humidifier capacity

²⁾ with additional flow divider pipes and 8 aerosol outlets

³⁾ with integrated water drain

STULZ USM/USS UltraSonic® controller

The STULZ UltraSonic® controller is fully integrated in a control system, which can actuate up to 15 humidifiers as a master-slave solution. Each humidifying system requires the installation of just one controller, with plain text display for entering setpoints and showing control feedback values and status messages/alarms, in the USM master control unit. All other humidifiers in the system are controlled by the USS slave control units.

STULZ UltraSonic® controllers – Advantages at a glance

- Plain text display
- 2 analog inputs (0-1 V/0-10 V/optional: 4-20 mA)
- Optional connection of 2 temperature sensors or 1 sensor + external control signal
- Proportional closed-loop control by means of a solid-state relay
- Stepless compensation with 2 simultaneous input signals thanks to staggered limit sensors
- Time-controlled actuation of an external valve (hygienic flushing cycle)
- Optional connection of a conductivity monitor can be connected (with discontinuous water conditioning)
- Water level, water shortage and water temperature monitoring
- 48 V low-voltage control for greater safety
- Status signals provided as a floating output and optical signal
- Fault signals provided as a floating output and optical signal
- Optional connection of a limit monitor
- Remote ON/OFF
- Display text available in various languages (optional)



USM master control unit



USS slave control unit



Control module

USM/USS UltraSonic® controller			
Model	Dimensions H x W x D (mm)	Transformer power VA	Weight (kg)
USM 503	600 x 400 x 210	500	27.0
USM 1303	600 x 400 x 210	1,300	38.0
USS 503	400 x 400 x 210	500	22.0
USS 1303	400 x 400 x 210	1,300	33.0

STULZ Company Headquarters

D **STULZ GmbH**
Holsteiner Chaussee 283 · 22457 Hamburg
Tel.: +49(40)55 85-0 · Fax: +49(40)55 85-352 · products@stulz.de

STULZ Subsidiaries

- AUS** **STULZ AUSTRALIA PTY. LTD.**
34 Bearing Road · Seven Hills NSW 21 47
Tel.: +61(2)96 74 47 00 · Fax: +61(2)96 74 67 22 · sales@stulz.com.au
- CN** **STULZ AIR TECHNOLOGY SYSTEMS (SHANGHAI) CO., LTD.**
No. 999 Shen Fu Road, Min Hang District · Shanghai 201108 · P.R. China
Tel.: +86(21) 54 83 02 70 · Fax: +86(21)54 83 02 71 · info@stulz.cn
- E** **STULZ ESPAÑA S.A.**
Avenida de los Castillos 1034 · 28918 Leganés (Madrid)
Tel.: +34(91)517 83 20 · Fax: +34(91)517 83 21 · info@stulz.es
- F** **STULZ FRANCE S. A. R. L.**
107, Chemin de Ronde · 78290 Croissy-sur-Seine
Tel.: +33(1)34 80 47 70 · Fax: +33(1)34 80 47 79 · info@stulz.fr
- GB** **STULZ U. K. LTD.**
First Quarter · Blenheim Rd. · Epsom · Surrey KT 19 9 QN
Tel.: +44(1372)74 96 66 · Fax: +44(1372)73 94 44 · sales@stulz.co.uk
- I** **STULZ S.P.A.**
Via Torricelli, 3 · 37067 Valeggio sul Mincio (VR)
Tel.: +39(045)633 16 00 · Fax: +39(045)633 16 35 · info@stulz.it
- IN** **STULZ-CHSPL (INDIA) PVT. LTD.**
006, Jagruti Industrial Estate · Mogul Lane, Mahim · Mumbai - 400 016
Tel.: +91(22) 56 66 94 46 · Fax: +91(22) 56 66 94 48 · info@stulz.in
- NL** **STULZ GROEP B. V.**
Postbus 75 · 1180 AB Amstelveen
Tel.: +31(20)54 51 111 · Fax: +31(20)64 58 764 · stulz@stulz.nl
- NZ** **STULZ NEW ZEALAND LTD.**
Office 71, 300 Richmond Rd. · Grey Lynn · Auckland
Tel.: +64(9)360 32 32 · Fax: +64(9)360 21 80 · sales@stulz.co.nz
- PL** **STULZ POLSKA SP. Z O.O.**
Budynek Mistral · Al. Jerozolimskie 162 · 02 – 342 Warszawa
Tel.: +48(22)883 30 80 · Fax: +48(22)824 26 78 · info@stulz.pl
- USA** **STULZ AIR TECHNOLOGY SYSTEMS (SATS), INC.**
1572 Tilco Drive · Frederick, MD 21704
Tel.: +1(301)620 20 33 · Fax: +1(301)662 54 87 · info@stulz-ats.com
- ZA** **STULZ SOUTH AFRICA PTY. LTD.**
P.O.Box 15687 · Lambton 1414 · Gauteng
Tel.: +27(11)873 68 06 · Fax: +27(11)873 31 3 · dudley@stulz.co.za

STULZ the natural choice

Close to you all over the world.

... With specialist, competent partners in our subsidiaries and exclusive sales and service partners around the world. Our five production sites are in Europe, North America and Asia.